DIY Air Cleaner

How to make a single filter and box fan air cleaner

Materials You Will Need
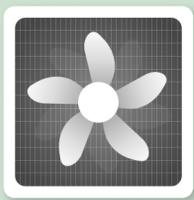
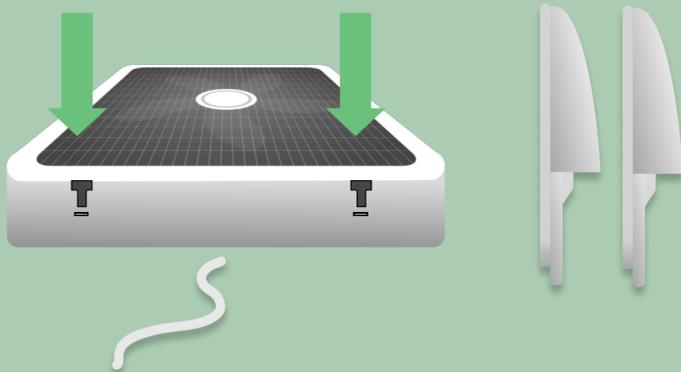|					
1 20x20" Box Fan (Min. 75 Watts)	**1** 20x20" MERV 13 Filter (MPR 1900)	Duct Tape	Scissors Or Box Cutters	Pencil Or Pen	Ruler Or Measuring Tape
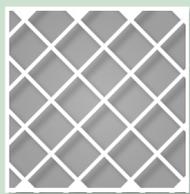
Note: Use a new, clean fan in good condition.

1. Take the fan out of its box.

Find the **feet** of the fan attached to the handle. Twist apart and **forcefully slide** into slots found on the bottom of the fan.
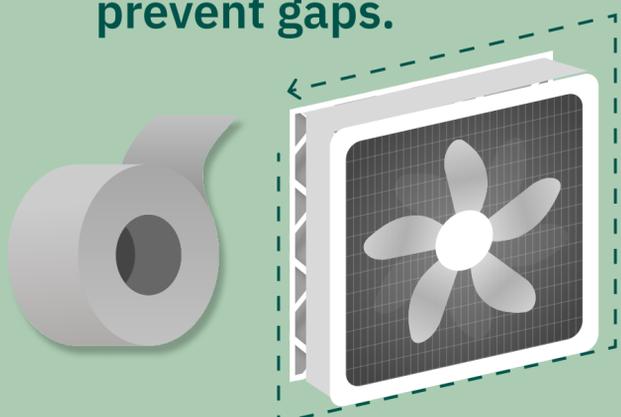
2. Find the directional arrow on the side of the filter. Place arrow facing the back of the fan.
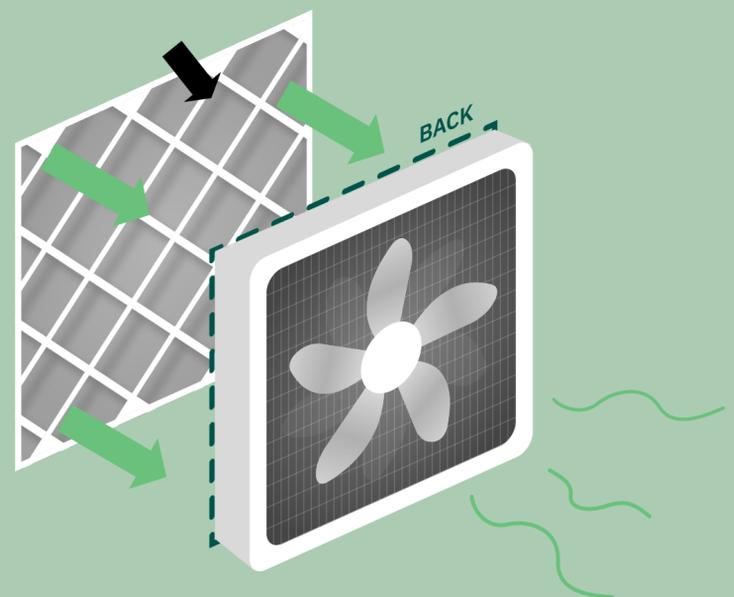
BACK

3. Lay the fan face down.

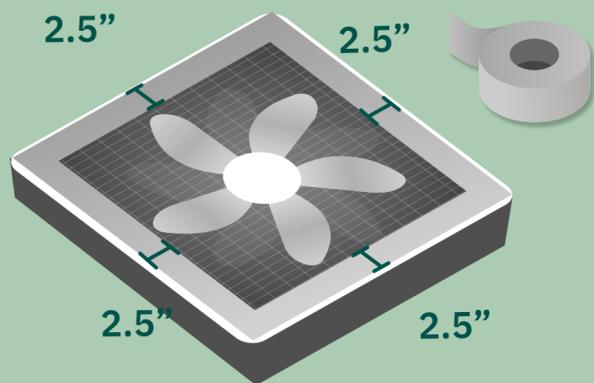Duct tape the filter directly to the back of the fan. Seal all sides thoroughly to prevent gaps.

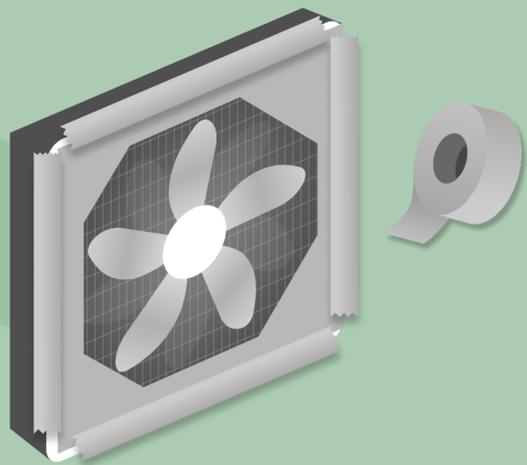Tip: The front of the fan includes the logo

Using Duct Tape To Make The Shroud
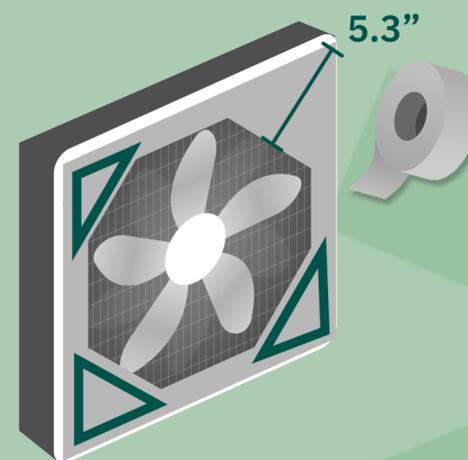
4. Lay the fan face up on your desk.

Tape around the front of the fan, creating a border. Measure 2.5" from the outer edge of the unit on each side. Multiple strips of tape will be needed.

2.5"   2.5"

2.5"   2.5"

5. Tape the corners of the front of the fan. Measure 5.3" from the outer edge.

5.3"

6. Add more duct tape as needed to close all gaps around the edges and corners.

7. Personalize your air cleaner with stickers and decorative tape to make it uniquely yours.

What Is A Shroud?

The shroud stops air from being recaptured into the fan from the corners, which would reduce its effectiveness.